


Namelist "Cylindrical_Immersed_Bodies"

This data setup is used to build the cylindrical solid bodies that contribute to the geometrical configuration. The form and the position of each cylinder are defined by means of its height, the axis lengths of its elliptic base and coordinates of the mid-height point.

Full data set of the namelist

```
&Cylindrical_Immersed_Bodies  Axis_Direction= 1 ,
                               Xi_Center= 0.0
                               Xj_Center = 0.0 ,
                               Xk_Center= 0.0,
                               Small_Axis_Radius= 0.0 ,
                               Great_Axis_Radius= 0.0 ,
                               Half_Height= 0.0,
                               Wall_BC_DataSetName="Set1"/
```

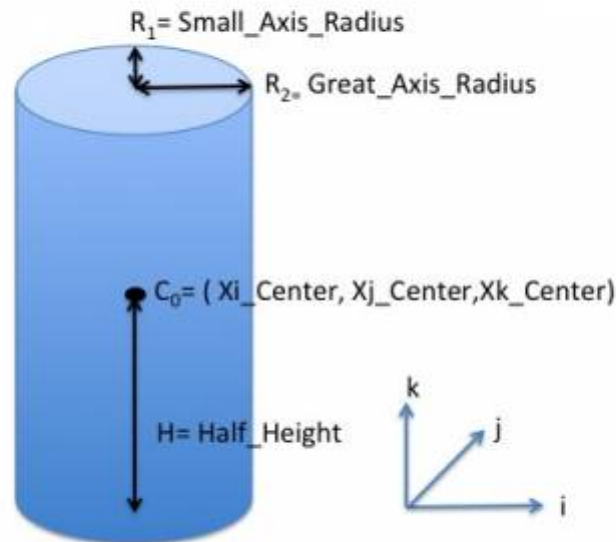

In 2D geometrical configurations, only the part related to the base of the 3D-cylinder can be used to build an elliptic form. In this case, the height of the cylinder is zero and the coordinates of the mid-height point coincide with the center of the ellipse. Don't forget to set the boolean data "End_of_Data_Block" at the end of the namelist. A ".true." value means the end of the data block when several namelists are used to

create several cylinders.



Find [here](#) how to construct the wall boundary conditions and some examples.

Definition of the data set

Axis_Direction

- Type : real value
- This value defines the orientation of the axis with respect to the grid index $\{I,J,K\}$. The values 1, 2 and 3 are associated to the I,J and K-direction, respectively.
- Default value : none

Xi_Center, Xj_Center, Xk_Center

- Type : real value
- Coordinates of the mid-height point of the cylinder (in 3D) or the center of the ellipse (in 2D).
- Default value : none

Small_Axis_Radius

- Type : real value
- Half length of the small axis of the elliptic base of the cylinder.
- Default value : none

Great_Axis_Radius

- Type : real value
- Half length of the great axis of the elliptic base of the cylinder.
- Default value : none

Wall_BC_DataSetName

- Type : character string
- Name of the wall boundary condition set associated with the body. The wall boundary condition sets are built by means of the namelists [Heat_Wall_Boundary_Condition_Setup](#) (Heat boundary conditions) , [Velocity_Wall_Boundary_Condition_Setup](#) (Velocity boundary conditions) and [Species_Wall_Boundary_Condition_Setup](#) (species boundary conditions), used in regard to the type of problem. The user finds [here](#) some examples about wall boundary conditions).

- Default value= none

From:

<https://sunfluidh.lisn.upsaclay.fr/> - Documentation du code de simulation numérique SUNFLUIDH

Permanent link:

https://sunfluidh.lisn.upsaclay.fr/doku.php?id=sunfluidh:cylindrical_immersed_bodies_setup_namelist&rev=1506943279

Last update: **2017/10/02 13:21**

